

CLEANING INSTRUCTIONS / waterless Urimat-urinals

Use only MB ActiveCleaner cleaning fluid for cleaning.

Do not use chemicals or solvents that damage the surface of the urinal.



MB-ActiveCleaner

0,5 dl + 1 L H²O



MB-ActiveCleanerTab

2 kpl /pcs/st + 1 L H²O




Dilute the concentrated cleaning fluid.



Lift the grate off the odor trap.



Spray cleaning fluid over the entire urinal.

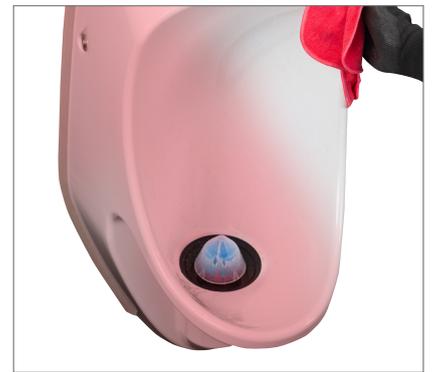

Wipe the urinal on the outside first.



Then wipe the urinal's inside.



Do not forget the edges of the odor trap and the grate.



Wipe the grate on both sides.



Place the cleaned grate on the odor trap.



Wipe the lower part of the urinal and its surroundings.



Spray a thin layer of MB-ActiveCleaner into the urinal bowl.

MB-ACTIVE-TRAP

- changing the odor trap

Do not use fragrant urinal mats, they inhibit the microbes in the odor trap from functioning.



Remove the transport protection adhesive and the piece of cardboard inside will slide out.



Spread armature grease onto the edge of the odor trap to make it seal tight against the urinal.

Do NOT spread armature grease on odor traps used in ceramic urinal models.



Pull out the odor trap with the tool.



Place the odor trap in the enclosed thrash bag.



Rinse the drainage pipe with water.



Clean the bowl and the drain carefully with a brush.



Rinse the urinal bowl and the drain with water.



Push the new odor trap down tight against the urinal.



Change the grate too. The odor trap package always contains a new grate.



Pour water into the urinal to make sure that the drain and the odor trap are working.



Finish off with spraying a thin layer of MB-ActiveCleaner into the urinal bowl.